 


1. Power


When the power is connected to the controller a red light will appear on the display. The red light display signifies that the controller has power but the unit is off. The room temperature will also appear on the display panel.

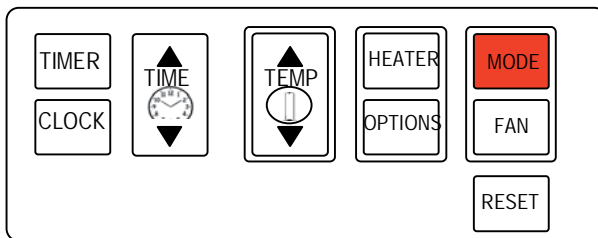

2. Mode


Press the mode button until the display shows the mode you desire;

- Auto 20-25
- Cooling (as described in step 4)
- Heating (as described in step 4)
- Dehumidification
- Fan

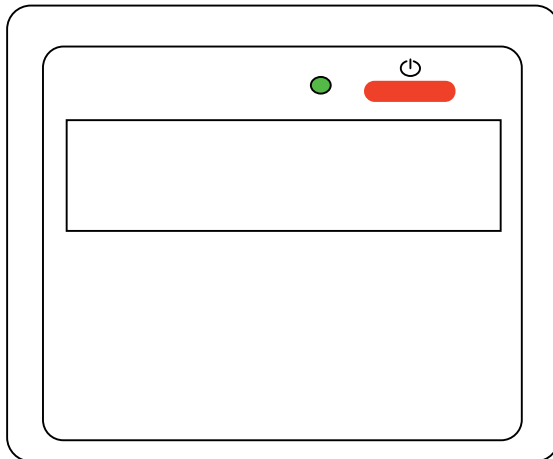


3. Now turn the unit on

To start unit press the on button, which will automatically start the unit in the mode you have selected. A green light will display instead of the red light.

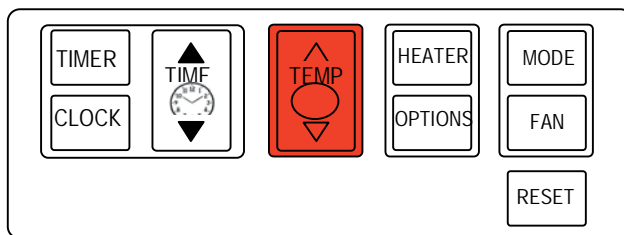

4. To Set The Temperature


In Automatic mode, the unit will decide to heat or cool to the desired temperature by itself. In heating or cooling you need to manually set the temperature you desire. The range available is 18 – 30 degrees Celsius.

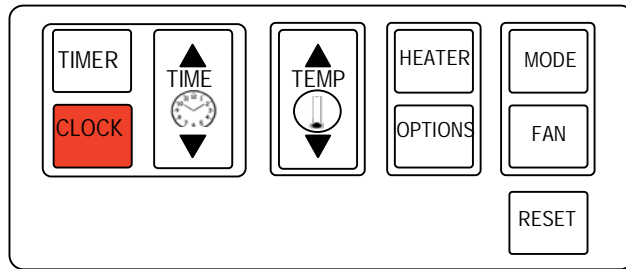

5. Setting the time.

Press the clock button using the display on the right of the screen, you can press the up or down function of the time button to select the minutes. Press the clock button again to select hours.


Press the clock button again to select the month. Press the clock button again to select the year. In year, month, day, hour and minute order.

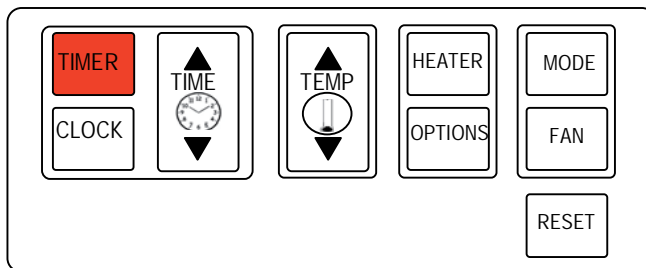

6. Setting the time clock.

To use the timer press timer, which displays the start time. Use the time up and down button to select the minutes, then press the timer button to select the hours. Again use the time up and down buttons to select the hour.

Press the time button again to select the 'off' time following the same process.

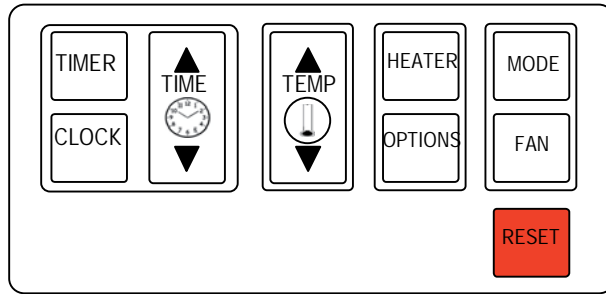


7. The Reset Button

To cancel all personalised settings and return to the default settings press the reset button. The time setting will remain.

If a fault code appears, for example Er: 04, press the reset button. If the fault re-appears contact your serviceman.

The reset button can also be used to “lock” and unlock the system preventing unwanted users.

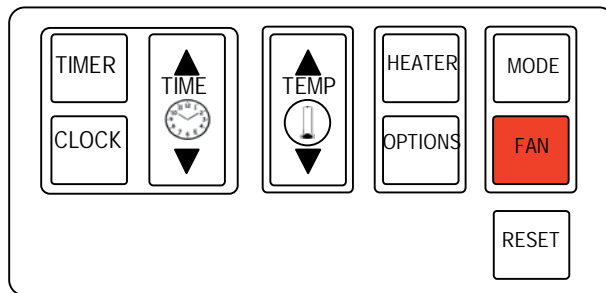

8. The Fan Button

On some models, the unit has a 3-speed fan setting. In commercial applications the fan is locked in a single speed setting. If you want access to 3-speed fan, please contact your installation company.